

User Manual

GrainSense[®] SILO Analyzer





Imprint

Issue: 08/2026

Manufacturer

GrainSense Oy

Tutkijantie 9

90590 Oulu

Finland

Contact details can be found on the back page of this manual.

This manual is only intended for the GrainSense Flow Silo Analyzer v1.4.

Before using the GrainSense Flow Silo Analyzer, the operator must read carefully the detailed instructions for safe and correct use of the GrainSense Flow Silo Analyzer.



Table of Contents

1.	Introduction.....	5
2.	Safety and correct usage instructions	5
2.1	Safety	5
2.2	Correct use	6
2.3	Exclusion of warranty	6
3.	GrainSense Silo analyzer	7
3.1	Product description	7
3.2	Sensor connectors	10
3.3	Gateway connectors and fuses	11
4.	GrainSense Silo Dashboard	13
5.	GrainSense Data collection	13
5.1	GDPR guidance	13
5.2	Data infrastructure and protection	13
5.3	Data handling	13
5.4	User data control	14
6.	Technical specifications	15
7.	Installation	16
7.1	Installation instructions	16
7.2	Package Contents (see 3.2)	16
8.	Installation in Grain Handling Facility	17
8.1	Installing the sensor unit and dosing auger	17
8.2	Installing the gateway	19
9.	Operation Instructions	20
9.1.	How does it work?	20
9.2.	Powering up the GrainSense Silo Analyzer	21
9.3.	Network settings	22
9.4.	Login	23
9.5.	Check for updates	24



9.6.	Language selection	25
9.7.	Measurement settings	26
9.7.1.	Calibration selection	27
9.7.2.	Setting alarms/relays	28
9.8.	Starting measurement session	29
9.9.	Stopping measurement session	31
9.10.	Viewing results	31
10.	Registering to GrainSense cloud	32
11.	Maintenance and servicing	35
11.1.	Preventive maintenance	35
11.2.	Cleaning the glass tube	35
11.3.	Updating the calibrations on the GrainSense Silo analyzer	35
12.	Customer Return Instructions	35



1. Introduction

Thank you for choosing GrainSense.

With GrainSense Silo analyzer, you analyse your grain. You can track your grain quality real-time from flowing grain. You receive reliable data, and you can store results in the cloud – so you can make the right decisions to control your outputs.

The GrainSense Silo analyzer is a revolutionary grain analyzer with advanced NIR (Near Infrared) technology. You get reliable protein, moisture, oil and carbohydrate contents instantly from flowing grain.

2. Safety and correct usage instructions

2.1 Safety

GS Silo analyzer is designed and manufactured in compliance with the latest applicable EU regulations, directives, and standards to ensure safety. It is essential to familiarize yourself with the information regarding product compliance and markings. GS Silo analyzer complies with all relevant EU regulations, directives, and standards applicable to its intended use. It has been designed and manufactured to meet the given requirements, ensuring its safe operation when used as directed.

Type Label: Please refer to the type label attached to the product for specific markings indicating compliance with relevant regulations, directives, and standards. The type label provides important information such as the CE marking and other possible and relevant certifications.

CE Marking: The CE marking on GS Silo analyzer indicates its compliance with the essential requirements of applicable EU directives and regulations. It demonstrates that the product has undergone assessment and meets the necessary safety, health, and environmental protection standards. Declaration of Conformity is available from request.

User Responsibilities: As a user of GS Silo analyzer, it is important to read and understand the user manual in its entirety. Follow all instructions, warnings, and precautions provided to ensure safe operation, prevent hazards, and maintain the product's performance.

If you have any questions regarding the safety, compliance, or operation of GS Silo analyzer, please contact our **customer support**: support@grainsense.com. Our team is available to provide guidance and address any concerns you may have.

Remember, it is crucial to adhere to safety guidelines, use the product as instructed, and exercise caution while operating GS Silo analyzer. Failure to follow these instructions may result in personal injury, property damage, or compromised product performance. By using GS Silo analyzer, you acknowledge that you have read and understood this safety chapter, and you agree to assume responsibility for using the product in a safe and responsible manner.



2.2 Correct use

The following points must be observed in order to use the GrainSense Silo analyzer in a correct manner:

Set up and operation

Adherence to the maintenance and servicing instructions

2.3 Exclusion of warranty

GrainSense is not liable for the following damages of the GrainSense Silo analyzer:

- All damage to the GS Silo analyzer misuse.
- Damage to the display resulting from applied pressure and scratches.
- Incorrect storage.
- Usage beyond the range of operational temperatures.




3. GrainSense Silo analyzer

3.1 Product description


The GrainSense Silo analyzer has been developed for analyzing real-time grain quality in environments where grains are flowing. The GrainSense Silo analyzer measures protein, moisture, oil and carbohydrates online during processing or storing.

From a grain entry and exit system, the GrainSense Silo analyzer will continuously extract a sample of the grain from the connected system and perform a real-time quality analysis. The key values can be seen on the display of the device and the measurement data is sent to GrainSense Cloud, enabling the user to monitor the results in real time and to make quality-based decisions.

GS FLOW ON SILOS

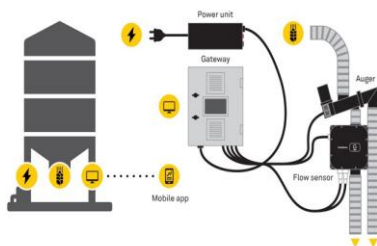

Schematic view of operation principle

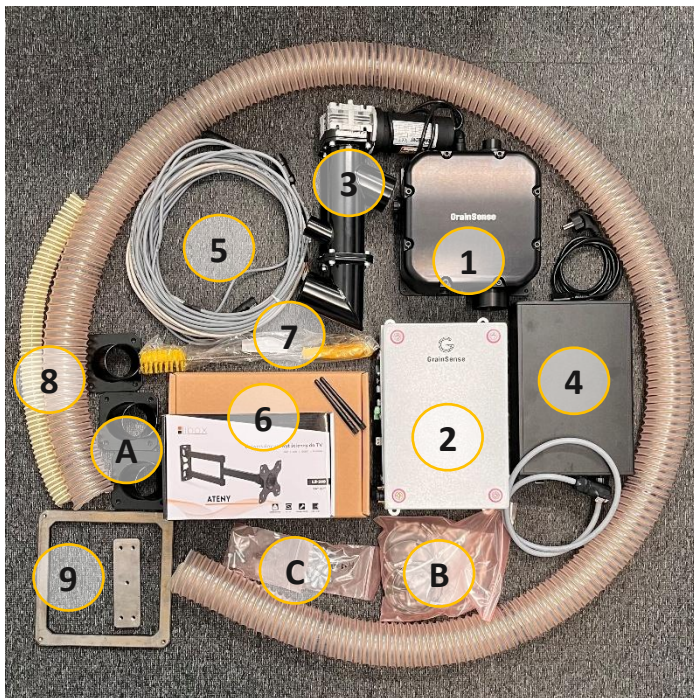

1. GrainSense Silo analyzer Sensor unit
2. GrainSense Silo analyzer Gateway unit
3. GrainSense Silo analyzer Dosing Auger
4. GrainSense Silo analyzer Power unit
5. Cables (Auger Control, Sensor Power, Sensor Communication)
6. Touchscreen Display, cables and mounting kit, and Wi-Fi antennas for Gateway
7. Brush for cleaning the glass tube
8. Hoses (auger to sensor 32mm Ø, material for input/output and bypass 63mm Ø)
9. Mounting plates for Dosing Auger [and GrainSense Silo analyzer, not commonly used]
- A. Grain Inlet/Outlet adapters 3 pcs (or optionally 2pcs, see X.)
- B. Hose clamps 8 pcs
- C. Bolts
- X. Optional: Y-shape adapter for 63mm hoses which can be used to combine sensor outlet and bypass (not in the picture)



3.2.1 Additional installation equipment and connectivity requirements

During installation and operation:

- Wi-Fi- connection

During installation:

- A drill and a screwdriver
- Welding machine (if applicable)
- Alloy wrenches
- Drill bit hole saw 60 mm




3.2 Sensor connectors



*Sensor power connector (2pin) on the bottom left
and communication connector (multi-pin) bottom right*



3.3 Gateway connectors and fuses

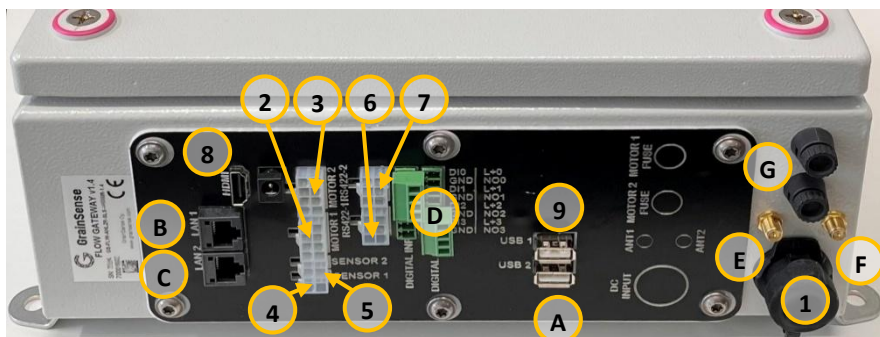

1. **DC Input**, Power Inlet (4-pin)
2. **Motor 1** / Dosing Auger 1 Outlet (8-pin connector)
3. **Motor 2** / Dosing Auger 2 Outlet (8-pin connector),
for Dual-Sensor and Dual-Auger product version
4. **Sensor 1**, Sensor Power 1 Outlet (2-pin connector)
5. **Sensor 2**, Sensor Power 2 Outlet (2-pin connector),
for Dual-Sensor and Dual-Auger product version
6. **RS422-1**, Sensor 1 Communication Connector (6-pin connector)
7. **RS422-2**, Sensor 2 Communication Connector (6-pin connector),
for Dual-Sensor and Dual-Auger product version
8. **HDMI**, Touchscreen display
9. **USB 1**, Touchscreen display
- A. **USB 2**, Reserved
for GPS in GS Flow Combine product version
- B. **LAN1**, Ethernet port (RJ45) for industrial protocol support;
WebSocket, Modbus TCP/IP or OPC UA
- C. **LAN2**, Ethernet port (RJ45) Reserved
- D. **Digital Inputs / Outputs**, Trigger I/O's, for usage contact GrainSense support



Cable Connectors Attachment to 1-7:

Check that the orientation of the connector is correct.

Apply firm pressure while pushing the connector into place. One should feel or hear a distinct snap as the locking mechanism engages. This ensures a secure connection.

Cables Detachment:

Depress the connector's release button.

- E. **ANT1**, Wi-Fi 1 antenna connector (rp-sma)
- F. **ANT2**, Wi-Fi 2 antenna connector (rp-sma)

Optimal Wi-Fi Antenna Positioning:

Aim for a 90-degree angle between antennas, if feasible.

- G. User-accessible fuse holders (screw caps), glass cartridge fuses for auger motors



4. GrainSense Silo Dashboard

The GrainSense Dashboard is a great web tool to analyze and manage the measurements on computer or tablet. Visit it at <https://flowdashboard.grainsense.com/>. The GrainSense Flow Dashboard also allows the user to export the data via an .xls or .csv file.

5. GrainSense Data collection

5.1 GDPR guidance

GrainSense is fully compliant with the General Data Protection Regulation (GDPR)

The GDPR has been in place since 25.5.2018. and involves all companies handling data from EU citizens. Data controllers (i.e. company) and data processors (company or subcontractor) are required to comply and give more power to a person regarding his data, that includes to:

Ask explicit consent for all different data types (GPS, email marketing, etc), describe how to data is used and for what purpose

Allow users to control the data (delete and export)

Companies must also have an internal guidance (this chapter of the User Manual) on GDPR.

5.2 Data infrastructure and protection

GrainSense acts as a data controller and processor, but for processing, it uses an outsourced infrastructure (Amazon AWS). GrainSense has taken measures to protect user data by:

- Applying standard encrypted HTTPS (TLS) communication
- Using proper authorization and authentication methods
- Using enterprise level framework (Java Spring)
- Taking nightly backups of the data (last 30 days)
- Limiting admin rights to the databases (two key persons have access to user's personal data)

5.3 Data handling

GrainSense gathers data of all registered users to:

- Provide calibrations and other data to users and to their GrainSense Silo analyzers
- Provide statistical analyses of the user-specific data, and to showing it only to the user itself
- Verify account status and level
- Store all measured data to provide an access anytime anywhere to the user
- Provide high level customer support and guidance
- Provide higher level statistical data of a specific reason (anonymized) and providing it to all users



5.4 User data control

The user can stop their subscription at any time and ask for their data to be deleted by sending a request to support@grainsense.com from the account email address. Deletion is made completely anonymizing the user data: User details (email, address, etc) are anonymized and GPS locations changed. However, measured data itself is not deleted and will be used for statistical purposes.

6. Technical specifications

Sensor Size	225x225x110 mm
Gateway Size	300x200x120 mm
AC/DC PSU Size	290x190x75 mm
Weight of the sensor	5 kg
Weight of the Gateway	4 kg
Weight of the AC/DC PSU	2.2 kg
Power supply:	1 phase, 100-240 VAC (max $\pm 10\%$ of the rated voltage) max. 190 VA, 50-60Hz
Target IP Class for sensor	IP69K
Target IP Class for gateway unit	IP54
Target IP Class for AC/DC PSU	IP54
Measurement principle	Near infrared transmittance spectroscopy
Sample size	100 grams per second flows through the sensor when measurement is ongoing
Species	Wheat, Durum wheat, Barley, Oats, Rye, Maize (Corn), Rapeseed (Canola), Soybean
Storage temperature	-20 to +85 °C (-4 F to 185 F)
Operation temperature	+5 to +45 °C (32 F to 113 F)



7. Installation

Continuous grain flow is extracted from e.g., silo's elevator to dosing auger of the GrainSense Silo analyzer. Dosing Auger feeds a steady grain flow through the GrainSense Silo analyzer sensor unit.

7.1 Installation instructions

This document describes the installation procedure of the GrainSense Silo analyzer. The Silo Analyzer can be in a grain handling facility.

Every location is somewhat unique and planning before starting the installation is recommended.

7.2 Package Contents (see 3.2)

Before starting the installation, check the installation location and carefully plan the exact place for the Sensor unit and the dosing auger. Same mounting plates can be used in grain handling facility.

8. Installation in Grain Handling Facility

8.1 Installing the sensor unit and dosing auger

GrainSense Silo analyzer can be installed in various locations in a grain handling facility. The sensor unit and the dosing auger must be installed in a vertically level surface, but the input hose, output hose and the bypass hose can also be installed in a round surface. The dosing auger and the input hose are installed above the sensor unit. Before starting the installation, make sure there is enough space for the dosing auger and for the input hose above the planned location of the sensor unit. Also, the input hose acts as a grain buffer for the GS Silo analyzer, so the longer the input hose is, the bigger the grain buffer is.



Example of Dosing Auger and Sensor installation

After the installation location is decided, mark the correct place for the sensor unit's mounting plate. The mounting plate is welded (if applicable) on to the elevator, so make sure that the location is correct and exactly horizontal. After the location has been marked, weld the mounting plate to the elevator.



NOTE! The installation is performed in a dusty environment. Make sure that all local regulations for welding are followed and take needed precautions to minimize the possibility of catching fire while welding.

After the Sensor unit's mounting plate is welded, install the sensor unit. When the sensor unit is in place, define the installation location for the dosing auger. The dosing auger should be installed above the sensor unit and the output of the dosing auger, and the input of the sensor unit must be aligned. When the correct location is decided, mark the correct place for the dosing auger's mounting plate. The mounting plate is welded the same way as the sensor unit's mounting plate. After the mounting is welded, install the mounting bracket and the dosing auger.

Next, the mounting plate for the dosing auger's input hose and the bypass hose and the output hose for the sensor unit is installed. The mounting plate for the dosing auger's input hose will be installed above the dosing auger and it must be aligned with the input of the auger. The more vertical distance between the mounting plate and the dosing auger, the bigger the grain buffer will be. After the location is defined, mark the location. Then weld the mounting plate the same way as the other mounting plates.



Another example of installation

The mounting plate for the dosing auger's bypass will be installed below the bypass and must be aligned with the bypass. Installation will be done the same way as the other mounting plates. The mounting plate for the sensor unit's output will be installed below the sensor unit and must be aligned with the sensor unit's output.

Installation will be done the same way as the other mounting plates.



After all of the mounting plates have been welded, install the hose connections and the input hose, output hose and the bypass hose. Also, install the hose between the dosing auger and the sensor unit. Use the included hose clamps for securing the hoses.

Note, recommended bending radius of the hoses is minimum 100mm.

8.2 Installing the gateway

The gateway unit can be placed freely within the facility. It may be installed, for example, in a control room or close to the sensor unit.

Once a suitable location has been selected, securely mount the gateway unit. Connect the wiring between the gateway unit, auger, and sensor unit, ensuring that the cables are routed in a way that prevents mechanical damage. Make sure that cables and connectors are not twisted or bent excessively.

Safety Notice

Safety should always be your first priority. Use appropriate tools and follow all applicable manufacturer instructions during installation.



9. Operation Instructions

9.1. How does it work?

A dosing auger is installed close to a place where grain is flowing.

The GrainSense Silo Analyzer controls the auger and electronics to perform measurements in configured intervals. Measurements are being made until the user ends the measurement session. The measurements are collected by the gateway unit and sent via Wi-Fi network to the GrainSense Flow database. If a Wi-Fi network is not available during the measurement session, the data is saved in the device's memory and it is sent to the cloud, when Wi-Fi becomes available.

The user can access the GrainSense Silo Analyzer measurement sessions anytime from the GrainSense Flow -dashboard with the provided credentials.


9.2. Powering up the GrainSense Silo Analyzer

- 1) Turn the main switch ON from the GrainSense Silo Gateway unit.
- 2) Change display mode to HDMI in Touchscreen if HDMI is not already on.



Display mode selector marked with orange circle.

- 3) Wait until you see the landing page on the screen.

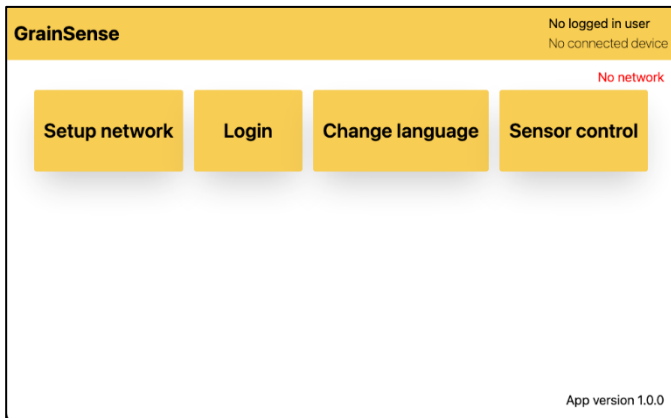



9.3. Network settings

GrainSense Silo Analyzer uses Wi-Fi network for Internet connection. To have the measurement results available real-time in the GrainSense cloud, Wi-Fi settings need to be configured.

- 1) Go to **Setup Network**.
- 2) Press connect Connect to Wi-Fi -button
- 3) Select from available networks correct network.
 - a. Insert password for your network
 - b. If your SSID is hidden, insert also your SSID (name of your Wi-Fi network) and select the security type of your network.

GrainSense @... .com
Connected device: ...

< Back Setup Wifi connection

SSID

Password

Connect

Available networks Rescan

NAME	SECURITY	SIGNAL
GrainSense	WPA2	📶
Open network	Open network	📶
WPA2	WPA2	📶

- 4) Tap Connect.
- 5) If screen shows established Wi-Fi network connection, press **Back** on upper left-hand corner.



9.4. Login

- 1) Press Login -button
- 2) Login with your registered user account and password

GrainSense

No logged in user
No connected device

< Back

Login

Email

Password

Login

Enter your email

` 1 2 3 4 5 6 7 8 9 0 - = backspace

tab q w e r t y u i o p [] \

a s d f g h j k l ; '

shift z x c v b n m , . / shift


.com @

Done




9.5. Check for updates

- 1) If there is on the bottom of the screen message on red that there is update available, download update by pressing **Start update** -button.

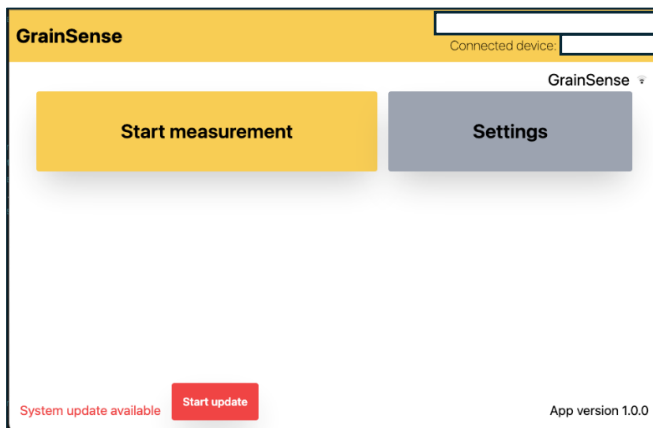


- 2) Confirm updating by pressing again Start update -button on following screen. "Update in progress" screen should appear. Wait for update and download completion and automatic restart of the GrainSense Flow Analyzer. During the update there are few different screens appearing and disappearing which are normal activity. After completion start-up screen should appear and GS Flow Analyzer is ready to use.

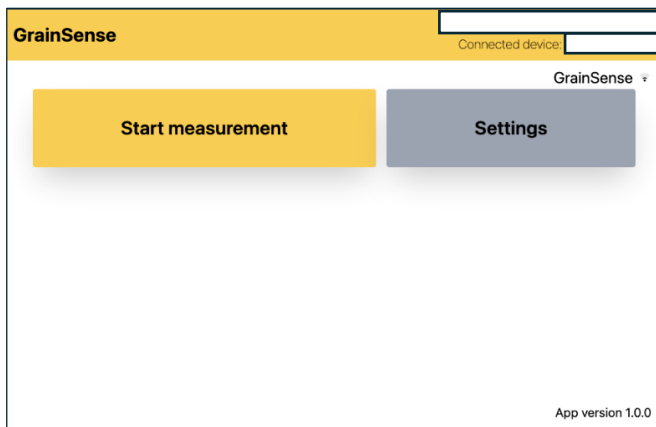




9.6. Language selection

- 1) Go to **Settings** → **Language**
- 2) Select the language you want to use with GrainSense Silo Analyzer. Click **Change language** -button.

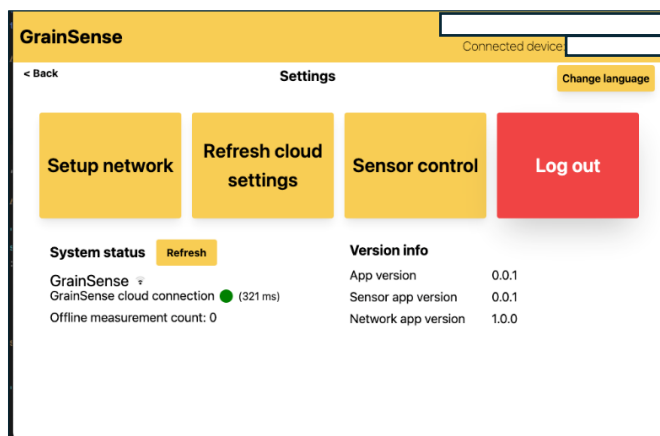

- 3) Change language -screen:

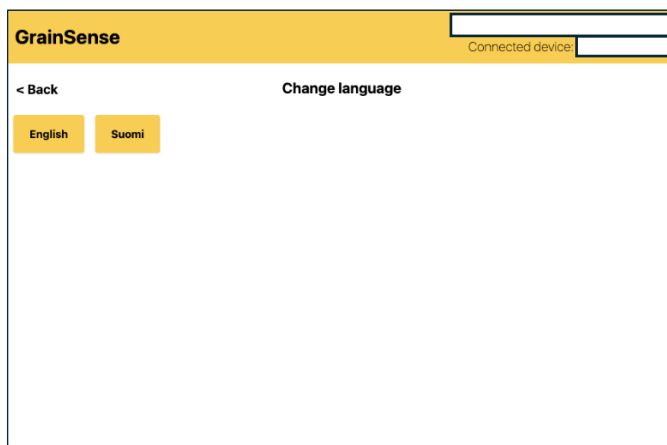



9.7. Measurement settings

From the Start measurement main view, you can define measurement interval (how often the measurements are taken during measurement session)

< Back **Start measurement**

Measurement session name

Select calibration

Measurement interval (seconds)

Relay 1 control Not set

Relay 2 control Not set

- 1) Tap on the **Measurement interval** value box to change the interval. Use the DEL -button to delete the old value and type in the new value with the keypad. Then tap **OK** to confirm the new value.



9.7.1. Calibration selection

- 1) Go to **Select Calibration**
- 2) Select the calibration that you want to use for the measurement session.

The screenshot displays the 'Start measurement' interface. At the top left is a '< Back' button. The title 'Start measurement' is centered at the top. Below the title, there is a text input field for 'Measurement session name'. Underneath, the 'Select calibration' dropdown menu is open, showing a list of crop types: WHEAT (selected with a checkmark), BARLEY, RAPESEED, MAIZE, SOYBEAN, RYE, and OAT. To the left of the dropdown, the labels 'Measurement interval (seconds)', 'Relay 1 control', and 'Relay 2 control' are visible. To the right of the dropdown, there are two 'Change relay control' buttons. At the bottom of the form, there is a yellow bar containing the 'Start measurement' button.



9.7.2. Setting alarms/relays

- 1) Go to **Change relay control**
- 2) Define the desired alarm parameters by using the radio -buttons and define the alarm threshold value in the field. Then tap **Save**.

The alarm can be removed from the same dialog by using the **Remove relay control** button.

Relay control 1

Control relay with: ☒ Protein ☐ Moisture ☐ Oil

Change state if results: ☒ Higher ☐ Lower

than %

Hysteresis limit times to state change (min 5)

Control type ☒ One time trigger - keep the relay ON after first reach ☐ Alternate relay state change


Remove relay control **Save**




9.8. Starting measurement session

After all the settings have been defined, the measurement session can be started.

- 1) Tap **Start measurement** button (if you are in Main view) and then from Start measurement view select **Start measurement**. One can also continue existing previous measurement session by tapping **Continue measurement** button.

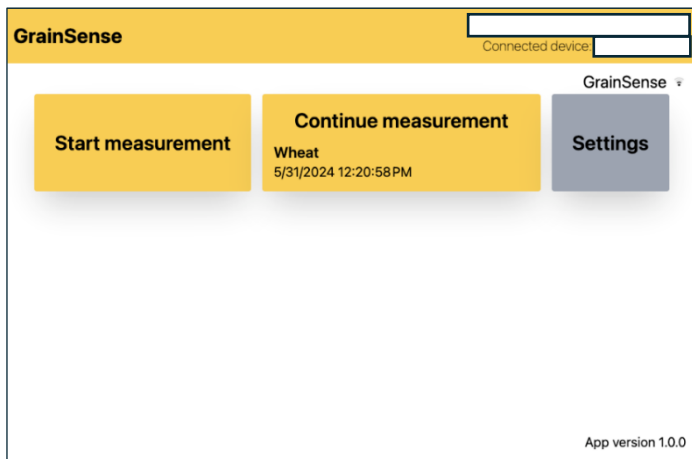


Main view

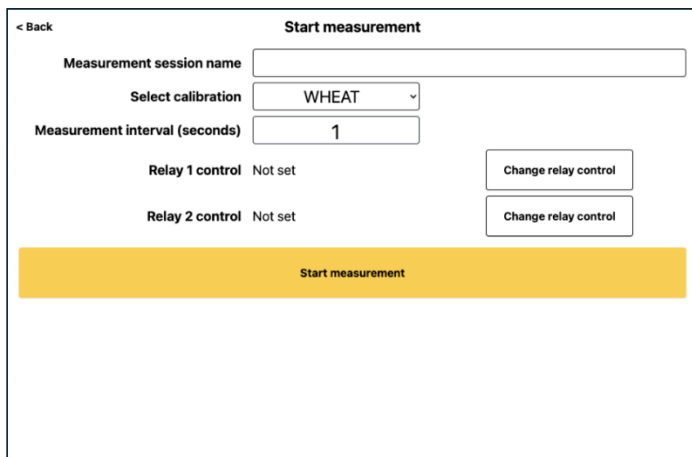

Start measurement view



- 2) In the measurement session -view, the user will see the following information:
- 3) Selected calibration (e.g. wheat)
- 4) Latest protein and moisture percentage values
- 5) Average protein and moisture percentage values from the whole duration of the measurement session
- 6) If an alarm was defined in the settings, it will be displayed here
- 7) Duration of the measurement session

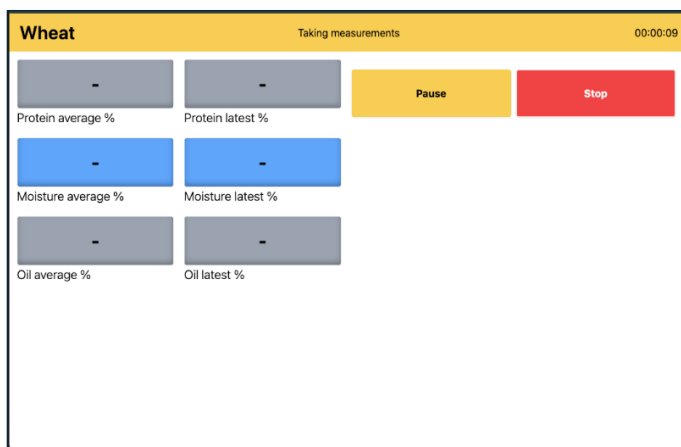




9.9. Stopping measurement session

When the batch of grain has been measured, the user can stop the measurement session by tapping the **Stop** button. After measurement has stopped user can exit from measurement by pressing **Exit** button.

9.10. Viewing results

The results are automatically uploaded to the GrainSense cloud. The user can log in and view the results in GrainSense Flow dashboard: <https://flowdashboard.grainsense.com/login>.

In GrainSense Silo dashboard, it is possible to add notes and attachments to measurement session export data and share the results via email.

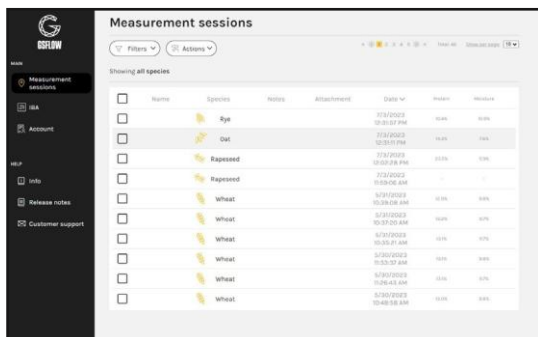

The screenshot shows the 'Measurement sessions' page in the GrainSense Flow dashboard. The page has a sidebar on the left with navigation options: Home, Measurement sessions (selected), Add, Account, Help, Info, Release notes, and Customer support. The main content area is titled 'Measurement sessions' and includes a 'Filters' dropdown and an 'Actions' button. Below this, it says 'Showing all species'. A table lists measurement sessions with columns: Name, Species, Notes, Attachment, Date Wt, Weight, and Moisture. The table contains 10 rows of data for various grain species including Rye, Oat, Rapeseed, and Wheat.


Name	Species	Notes	Attachment	Date Wt	Weight	Moisture
☐	Rye			27/3/2023 10:01:07 PM	10.45	10.5%
☐	Oat			27/3/2023 10:01:07 PM	10.45	10.5%
☐	Rapeseed			27/3/2023 10:01:07 PM	10.45	10.5%
☐	Rapeseed			27/3/2023 10:01:07 PM	10.45	10.5%
☐	Wheat			27/3/2023 10:01:07 PM	10.45	10.5%
☐	Wheat			27/3/2023 10:01:07 PM	10.45	10.5%
☐	Wheat			27/3/2023 10:01:07 PM	10.45	10.5%
☐	Wheat			27/3/2023 10:01:07 PM	10.45	10.5%
☐	Wheat			27/3/2023 10:01:07 PM	10.45	10.5%
☐	Wheat			27/3/2023 10:01:07 PM	10.45	10.5%

Please note that Individual Bias Adjustment (IBA) can be set from the Dashboard. For IBA update the touchscreen must be connected to the internet next time starting the session.



10. Registering to GrainSense cloud

1. Go to www.grainsense.com/pages/account-registration
2. Select the current product from the list

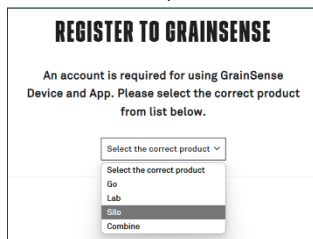

3. Select the “Silo”
4. Scroll down and click **Purchase now** - button on the GrainSense Flow user account license or **Activate now** depending on your license type.

GRAINSENSE SILO USER ACCOUNT LICENSE

Included in the licence:

- GrainSense Dashboard
- Latest calibrations and updates to your GrainSense device and software
- Updates to your Grainsense Silo device
- Grainsense cloud service with unlimited storage for your measurements
- Access to camera images when applicable

Subscription is valid for 1 year

500€
(+VAT) per year

PURCHASE NOW

Product code GS-FLW-ACC-LIC-P1

GRAINSENSE SILO LICENSE PRE-PAID ONE-TIME PURCHASE LICENSE

This One-Time Purchase License provides non-expiring access to the included GrainSense services and features.

- ✔ GrainSense Dashboard
- ✔ Latest calibrations and updates to your GrainSense device and software
- ✔ Grainsense cloud service with unlimited storage for your measurements

The subscription is valid for one GrainSense SILO Analyzer.
Subscription will be linked to Analyzer serial number.

PRE-PAID
One analyzer connected

ACTIVATE NOW



5. Follow the instruction at the GrainSense webpages if license is **Pre-Paid One-Time Purchase License**.
6. In case of an annual license type, on the payment -page of the **Purchase now**, select the payment method. Check the I'm not a robot -box
7. (or alternatively, solve the reCAPTCHA challenge) and then click on the 'Register' - button.

REGISTER TO GRAINSENSE

PRODUCT :GRAINSENSE FLOW USER ACCOUNT LICENSE

PAYMENT

We partner with Paddle to handle software payments and billing. Paddle serves the checkout on our websites through which you place an order. Amongst other payment methods, Paddle handles wire transfers on our behalf. GrainSense cloud services are billed annually. Please check your spam box!

Paddle buyer [terms and conditions](#)

☐ Cards, Paypal

☒ Invoice(Bank Wire Transfer)*

*An invoice will be sent to your email.
Note! For US business clients, only the bank wire transfer is available on the invoice. For paying with card, please select cards as your payment method.

Price:


500 €

(+VAT) Per year. No additional costs.

☒ I'm not a robot 

Register

8. You should see the thank you for registering message.

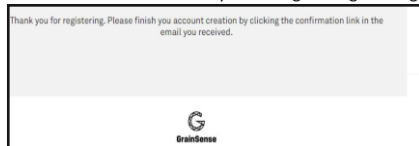


9. Go to your email inbox and open the "Confirm your email with GrainsenSense" - message.


Hi, reply Confirm your email with GrainSense. GrainSense logo, verify email address! Click the button below to verify email address and finish the registration. verify email GrainSense logo.



10. Click the 'Verify email' - button on the message.

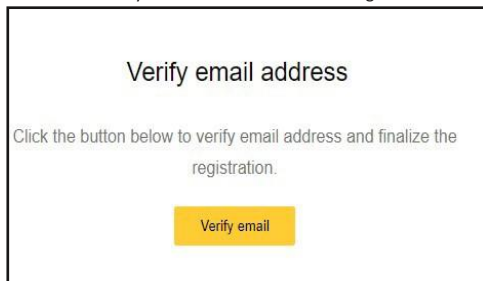

11. You have now registered your account. You should see the confirmation message on your browser.

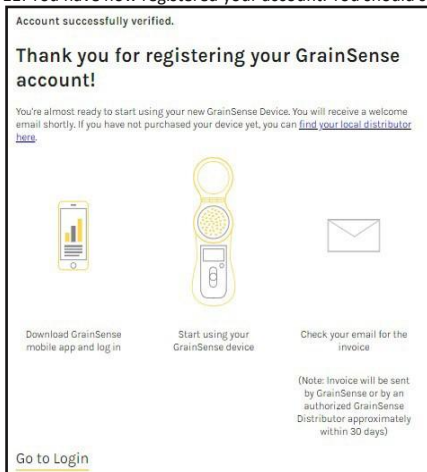

11. Maintenance and servicing

11.1. Preventive maintenance

We recommend cleaning the glass tube after every 20 h of operations.

Check the cables, connections, glass tube and lamp bulb annually.

If the lamp bulb or glass tube is broken, please contact your local distributor.

11.2. Cleaning the glass tube

The glass tube inside the sensor unit should be kept clean. Depending on the measured species and operating environment, the need for cleaning varies. We recommend cleaning the glass tube at least every fortnight, but a shorter interval might be needed.

To clean the glass tube, release the hose clamp on the output of the sensor unit. Remove the output tube and use the supplied brush. After the glass tube is clean, connect the output tube and tighten the hose clamp.

11.3. Updating the calibrations on the GrainSense Silo analyzer

When the GrainSense Silo analyzer is connected to the internet, it automatically checks and downloads new calibrations.

12. Customer Return Instructions

Dear Customer,

Thank you for using GrainSense LAB. When your device reaches end-of-life, please follow these steps:

- 1. Do not dispose of the device in household waste.**
This product is subject to WEEE regulations.
- 2. Return the device to GrainSense Oy for recycling at no cost to you.**
Pack the device securely.
Include any accessories originally supplied.
- 3. Ship to:**
Grainsense Oy
Tutkijantie 9
FIN-90590 Oulu
FINLAND
- 4. Shipping Costs:**
We cover all shipping costs.
Please contact us at sales@grainsense.com /
+358 44 970 6079 for a prepaid shipping label.
- 5. Why return?**
Recycling helps recover valuable materials and prevents environmental harm.

Thank you for supporting sustainable practices.

CONTACT

For any support, please contact your
local sales representative or
support@grainsense.com

www.grainsense.com